



User Manual  
JUICE by Elexa: MG2 MICRO SPEAKER POD

NEED HELP?

If you have questions about this speaker, please go to [www.juice-usa.com](http://www.juice-usa.com) to view product tutorials.

CONTACTING JUICE CUSTOMER SERVICE

If you have questions, our trained Customer Service Department is happy to assist you 24 hours a day, 7 days a week, every day of the year. Contact Juice Customer Service as follows:

- In North America dial: 1-888-229-1459
- Email Juice at [www.customer.support@elexausa.com](mailto:www.customer.support@elexausa.com)

DO NOT RETURN THIS PRODUCT TO THE STORE OR WEBSITE FROM WHICH IT WAS PURCHASED

If you believe the product is defective, has a missing or broken part or are having difficulty with it, please contact Juice directly, 24 hours a day, 7 days a week, 365 days a year as listed above, for a quick and efficient solution to the problem.

PACKAGE CONTENTS

- Rechargeable Speaker
- 3.5mm audio cable
- USB Charging cable
- User guide
- Music Coupon



PRODUCT DESCRIPTION

1. DC 5V charging jack
2. Power ON/OFF

GETTING STARTED



closed



open

To open speaker, gently press down on unit and it will pop up, revealing the USB charging port.



CHARGING THE BATTERY

1. To use the included USB Charging cable, plug one end into the DC 5V jack located at the bottom of the unit and the other end into a USB powered port or any other USB AC adapter (not included).
2. The battery is fully charged in 1.5 hours.
3. The red LED light indicates that the unit is charging and turns off when the battery is fully charged. You can disconnect the cable when charging is complete.

USING THE SPEAKER

1. Unwind the Audio Jack from the bottom of the speaker and plug it into your music device.
2. Turn on the speaker and adjust the volume by moving the ON/OFF switch to the right. The blue light indicates that it's on.
3. Turn on your music device and enjoy. The battery will last up to six hours on a single charge.
4. To stow the speaker simply detach it from the music player, turn it off, press down and tuck the audio jack back into the slot in the bottom of the speaker.



**NOTE :** When the sound becomes distorted or the LED light starts flashing, indicates the battery is low and the speaker needs to be recharged.

BEFORE USE

**To open speaker:** gently press down on unit and it will pop up, revealing the USB charging port. DO NOT pull on the unit once it is open, as it will automatically extend to the proper position.

**To close the speaker:**

Press the top and bottom of the unit together and twist the top of unit clockwise to lock into place.

**NOTE :** Keep the rubber feet of the unit clean to reduce vibration. Use the speaker on a smooth, clean surface, a textured surface may result in unwanted vibration and diminished sound quality.



Pulling the expandable speaker into the open position too forcefully may lead to permanent damage and void the warranty.

Juice  
By Elexa®  
squeeze the sound out™  
[www.juice-usa.com](http://www.juice-usa.com)

440X230MM